 
HOW TO TEST

Select a coin (nickel for premium width or quarter for one inch width).






Lay the coin over the point of one of the pins in the strip to be measured.



Press the pin out through the back of the strip.

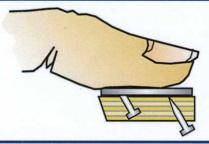

Lay the coin flat on the face of the strip where the pin has been removed and compare the width of the strip to the edges of the coin.





If the coin is smaller than the strip, the strip passes the coin test.



If the coin is the same size or wider than the strip, the strip fails the coin test.





If the strip fails with nickel, try a penny. If fails again it is less than .75 inch.



