



## Why One Inch Wide (Standard Width) Tack Strip Is Recommended

### PROBLEM # 1 Base Board Damage

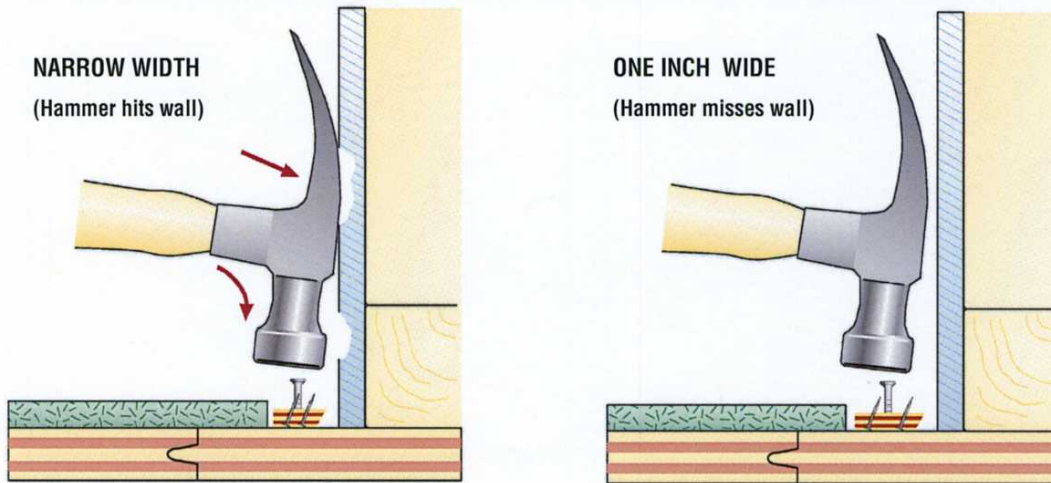


Anchoring nails are closer to the wall in narrow width (less than one inch or Standard width tack strip) and can cause more missed hits and increased base board damage.

### PROBLEM # 2 Carpet Hooking

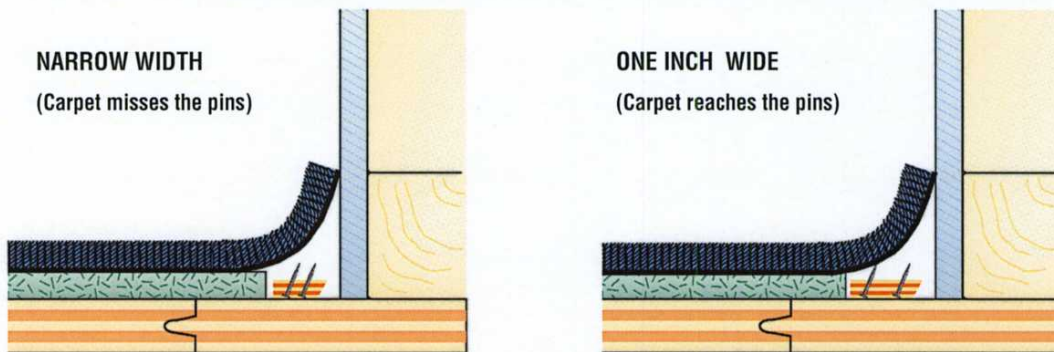

The pins are closer to the wall in narrow width strip (less than one inch or Standard width tack strip), making hooking more difficult, especially with stiff backed carpet or over a thick cushion.

### PROBLEM # 3 Double Stripping

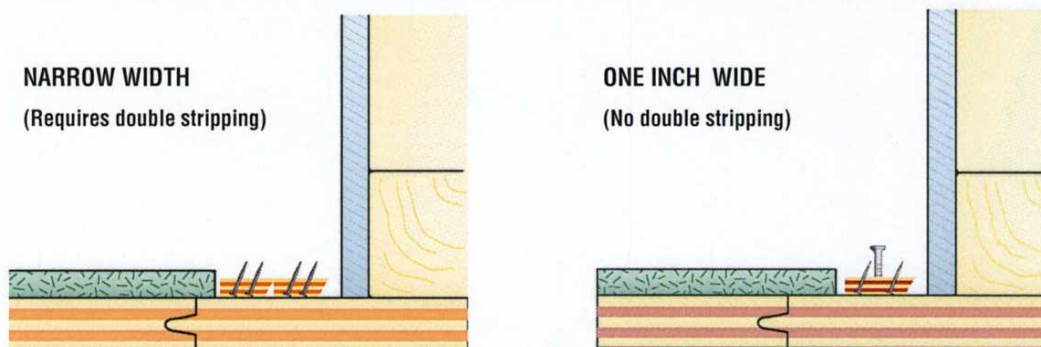

Narrow width tack strip is not as strong as one inch wide or Standard width tack strip, causing a greater risk of broken strips and an increased need for double stripping.